2026 NAVIGATOR

LINCOLN

# Quick Reference Guide

**WARNING**

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Middle East
Lincoln Client Relationship Centre
**800-04441067**
me.lincoln.com

This Quick Reference Guide is intended to supplement your vehicle Owner's Manual. Please read the entire Owner's Manual carefully as it contains detailed vehicle feature information and important safety warnings designed to reduce the risk of injury to you and your passengers. All information contained in this Quick Reference Guide was accurate at the time of publication. We reserve the right to change features, operation and functionality of any vehicle specification at any time. Your Lincoln distributor is the best source for the most current information. For detailed operating and safety information, consult your Owner's Manual.

### Warranty information

Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

# The Lincoln App*

Designed to make your Lincoln ownership effortless, the Lincoln app provides unique services and features through your mobile device including:

- Remote features including lock/unlock and start/stop
- Access and monitor your vehicle's health, oil life, tire pressure and odometer all from the Vehicle Service Tab.

## Elevated Convenience

With the Lincoln app, your vehicle is prepared when you are. Effortlessly extend the remote start or remotely activate the horn and lights directly from the app.

## Stay Connected

Enjoy the benefits Lincoln app has to offer using the mobile device in your hand or the smartwatch on your wrist.

Download the Lincoln app via App Store® or Google Play™ on your device.

*Lincoln app is available in select markets, please contact the authorized Lincoln distibutor. Use of Lincoln® is subject to the Lincoln® Terms and Privacy Policy available on me.lincoln.com and requires a compatible mobile device, internet access and connected vehicle software (including software updates from time to time). Lincoln® functionality and appearance may change over time due to software updates. You are responsible for internet access, mobile network data and voice call services required for your use of the Lincoln app on your mobile device, including associated fees. The Lincoln app and Lincoln® Connect modem can only work when both are connected to the telecommunications network. The modem will only function on the 4G or 5G telecommunications networks, as per the spec of the telematics unit in your vehicle. When these networks are no longer available, the modem will stop functioning and the connected services and all data transmission via the modem will cease. Lincoln cannot guarantee that Lincoln® will be in fully operating condition at all times and the Lincoln app may be unavailable or particular Lincoln® services interrupted. Connected service and features depend on compatible network availability. Evolving technology/cellular networks/vehicle capability may limit functionality and prevent operation of connected features. Lincoln is not responsible for any limitations or restrictions of the telecommunications network or of your mobile device.

Warning: Local laws prohibit some phone functions while driving. Check your local road rules before using these functions. Use Remote Vehicle Start and Stop responsibly and only in well-ventilated areas where you are aware of your vehicle's surroundings.
Remote Lock/Unlock requires power door locks. Remote Start/Stop available on select vehicles (and select variants). Requires feature activation.
App Store® is a service mark of Apple Inc.
Google Play Store™ is a trademark of Google LLC

U.S. model shown

# Cabin Overview

1 **Electromechanical Registers**
Use Digital Vent Controls to manage airflow through the touchscreen. See **Climate** section in this guide for more details.

2 **Panoramic Screen**
The Panoramic Screen is customizable. Theme and widget settings can be accessed and adjusted through the touchscreen. See **Widget Display** section in this guide for more details.

3 **Steering Wheel Controls**
Activate steering wheel controls by touching the steering wheel control pad on the left or right. The left control pad controls Driver Assistance features, and the right control pad controls Driver Adjustments and phone/media/voice. See **Steering Wheel Controls** section in this guide for more details.

4 **Lincoln Digital Experience**
The Lincoln Digital Experience can be controlled by the four icons stacked on the left side of the touchscreen:

- Home
- Quick Controls
- Apps
- Panoramic Configurator (Widgets)

5 **Push Button Ignition**
Press the START/STOP button while pressing the brake pedal to start the vehicle. Press the START/STOP button to turn the engine off.

6 **Drive Modes**
Drive modes allow you to tailor your vehicle's driving system to various road conditions, for optimal performance and comfort. See **Drive Modes** section in this guide for more details.

7 **Climate Controls**
The climate controls allow you precise and convenient control over the vehicle's climate settings from the touchscreen.
See **Climate** section in this guide for more details.
Tap the icon to launch additional controls.

8 **Gear Selector**
Press the brake pedal and select the desired gear to shift your vehicle in or out of gear. Gear positions will illuminate on the gear selector.

9 **Lighting Controls**
Tap the Lighting icon on the touchscreen to adjust exterior and interior lighting.
See **Lighting** section in this guide for more details.

10 **Profile**
Create multiple profiles, each with personalized vehicle settings. Enhance your profile by using your Google account to access key features and unlock new levels of personalization and convenience. See **Vehicle Set-up** section in this guide for more details.

11 **Phone**
Tap Add Phone to pair your mobile phone. Tap the connected phone icon for advanced settings.
See **Vehicle Set-up** section in this guide for more details.

12 **Camera**
Push the Camera button to launch and operate the 360° camera.
See Owner's Manual for more details.

# Steering Wheel Controls



Your vehicle has capacitive steering wheel controls that allow the driver to adjust/activate various vehicle functions. Running your finger over the controls will pull up the corresponding box of options on the panoramic display, allowing you to conveniently control the vehicle while keeping your eyes focused on the road.

**Right steering wheel control pad** controls driver adjustments, media, calls and other various functions.

**Left steering wheel control pad** controls advanced driver assist features, such as Cruise Control, and Lane-keeping Assist.

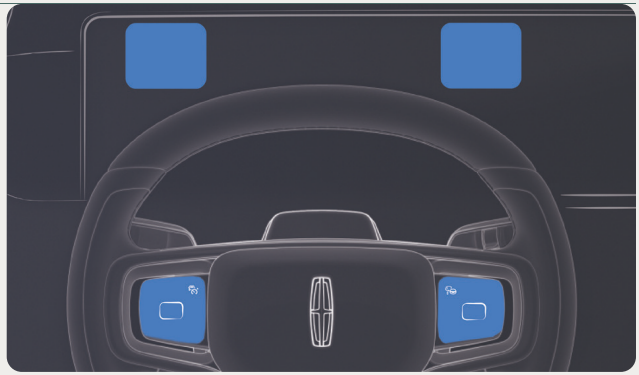

## Mirror, Pedal and Steering Wheel Adjustments

All adjustments can be initiated by touching the steering wheel control pad on the right to bring up the panoramic display menu.

### Mirrors

Press the driver adjustment icon on the right hand steering wheel control pad.

- Select the left Mirror icon or right Mirror icon .
- Use control pad to make adjustments using the guided prompts on the panoramic display.

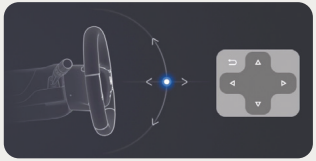

### Pedals & Steering Wheel

Press the driver adjustment icon on the right hand steering wheel control pad.

- Press the Pedal icon or Steering Wheel icon .
- Use control pad to make adjustments using the guided prompts on the panoramic display.

**Voice Assistant**

To activate Google Assistant from your steering wheel controls:

- Touch the right side steering wheel control pad to bring up the panoramic display menu.

Press the voice assistant icon.

For more details, see the Voice Assistant section in this guide.

**Phone and Media Controls**

To access your phone and media controls touch the steering wheel control pad on the right to bring up the panoramic display menu.

**Media Controls** (to engage)

Press the Play/Pause icon to play and pause media.

Press Volume icons to adjust media volume.

Press the Back or Forward icons to navigate.

**Incoming/ Active Calls**

Press the Answer Call icon to accept calls.

Press the End Call icon to end calls.

Press the Volume icons to adjust call volume.

# Seat Controls



## **Front Row Basic Seat Adjustments** (driver and passenger)

Change seat back position to an upright or reclined position.
Slide the seat position forward or back and raise or lower the seat position.

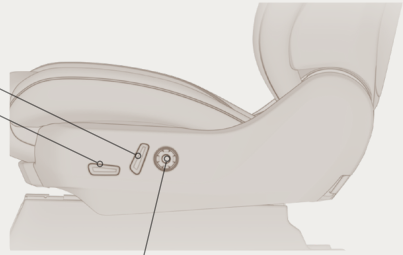

## Front Row Advanced Seat Functions

The perfect position seats with active motion massage allow you to tailor your seating position for ultimate comfort. Designed with comfort in mind the seats provide a personalized experience for the driver and the front passenger.

1st Press

2nd Press

## Massage

- To turn on your Active Motion® massage seat:
  Press the center of the circular button.
- Choose a massage:
  Press up or down on the circular button.
- Adjust massage intensity:
  Press left and right on the circular button.

## Seat

- Press the center of the circular button repeatedly until you get to the desired feature.
- Choose a seat section:
  Press up or down on the circular button.
- Adjust position:
  Press left and right on the circular button.

## **Power Headrest Adjustment** (if equipped)

- Tap Headrest in the touchscreen.
- Adjust backwards and forward:
  Press left and right on the circular button.
- Adjust up and down:
  Press up or down on the circular button.

### 2nd Row Advanced Seat Functions (if equipped)

To access seat adjustments, massage, heated and ventilated or chauffeur function, tap the seat icon in the console touchscreen.

### Heated 3rd Row Seats (if equipped)

Third row outboard heated seats can be controlled with the buttons on the back of the 2nd row console.

### Access 3rd Row

Provides easy entry and exit to and from the third-row seats. Your vehicle is equipped with one of the two ways to do this.

#### 2nd Row Tip-and-Slide

This feature allows for easier entry and exit from the third row seat.
**To activate:** Press the button on top of the seat backrest to tilt the entire seat forward and slide the seat forward until it stops.

**To return the seat to the seating position**: Slide the seat rearward while pulling down on the backrest until the latch fully engages.

**To move the seat further back:** Pull the lever under the front of the seat and slide backward.

or

#### 2nd Row Power Tailored Seats with Pitch and Slide

This feature can be accessed through the front row touchscreen or using the seat buttons.

**To activate:** Press the forward button on the top of the seat backrest. This will tilt and move the seat forward.

**To return:** Press the backward button on the top of the seat backrest. This will return the seat to its original position.

Notes:

- If your vehicle loses power, third row occupants may exit the vehicle by pulling the strap on the rear of the second-row seat backrest. This pitches the seat forward.

# Lighting Controls



Access the lighting menu by tapping the lighting icon on the touchscreen and tap to select Exterior or Interior.

## Exterior lighting

Headlamps automatically adjust to exterior conditions. You can also manually control your headlights from the lighting menu:

Tap to access lighting controls

AUTO – Tap Autolamps to turn headlamps On/Off (based on available daylight).

– Tap to switch on headlamps.

– Tap to turn On/Off parking lamps.

OFF – Tap to turn off headlamps.

Tap settings for additional lighting settings.

## Interior lighting

Ambient lighting is available when the headlamps are on.

- Select a color.
- Adjust the brightness using the slider bar.
- Turn off ambient lighting by adjusting the slider bar to the minimum setting.

Tap settings for display brightness adjustments.

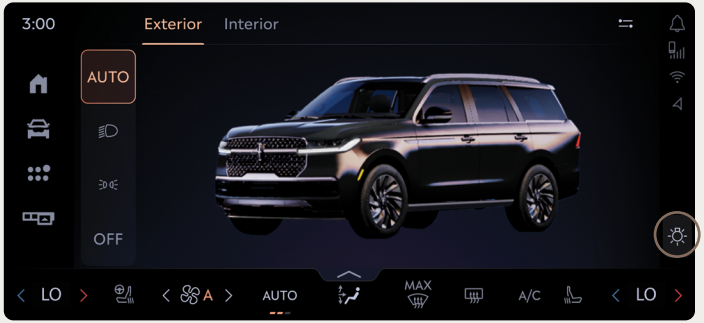


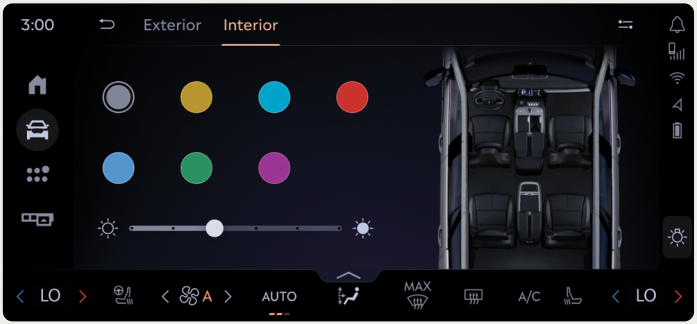

# Doorpad Keycode



## Displaying The Keypad Master Code

Your vehicle door keypad allows you to lock and unlock your vehicle using a numerical code. The keypad is located on the black applique above the door handle and illuminates when touched. You can view the master access code in the Panoramic display by carefully following these steps:

- Open the floor console storage compartment lid.
- Locate the "Passive Key Backup Position" slot. See the Starting and Stopping the Engine section of the Owner's Manual for more.

Note: All steps from this point forward must be completed within 30 seconds in the exact sequence listed. If a mistake is made, stop and wait at least 60 seconds before beginning again.

**Review steps before beginning**

- Place the first of your Intelligent Access key fobs into the Passive Key Backup Position slot.
- Press the push-button ignition switch once and wait three seconds.
- Press the push-button ignition switch again and remove the first key from the Passive Key Backup Position slot.
- Insert the second Intelligent Access key fob into the Passive Key Backup Position slot.
- Press the push-button ignition switch.

The 5-digit master access code will appear in the panoramic display after other warning messages display. Save the code so you can use it later.

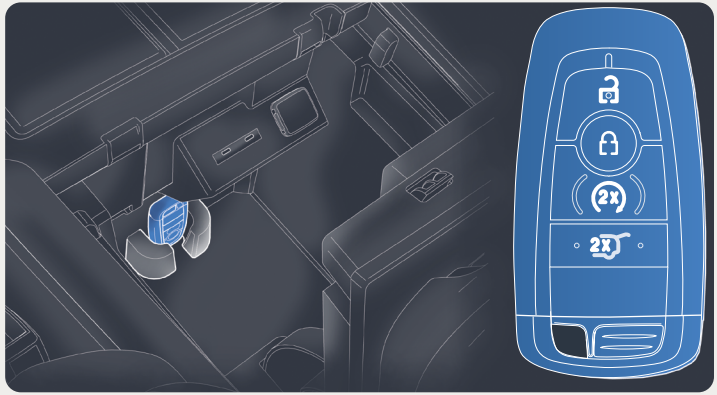


## Programming Your Own Personal Access Code

Follow these steps to program your personal access code:

- Enter your master access code on the keypad.
- Press 1·2 on the keypad within five seconds.
- Enter your personal access code. You must do this within five seconds of completing the above step.

The personal access code must have the same number of digits as your master access code.

To confirm the process was successful the doors lock and then unlock.

Your vehicle will support up to five unique access codes. Refer to the Owner's Manual for more information.

# Climate Controls

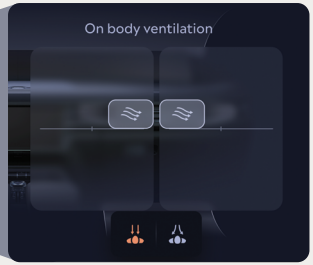


Interacting with any of the Digital Vent Controls will reveal presets

1 **Climate Control Menu**

Tap for the following climate controls.

2 **Power (climate on/off)**

Tap the power button to turn on and off the climate system. If front climate is off rear climate will not operate.

3 **Digital Vent Controls**

Drag the vent button to adjust the direction of air for each register. This will open the vent control view that allows you to select from preset locations for the driver and passenger.

Direct airflow onto the body.

Direct airflow away from the body.

- Tap airflow icon to turn on or off individual vents.

4 **AUTO Mode**

Enable the AUTO control to allow the climate system to manage the climate functions and reach a set temperature as quickly as possible. Controlling AUTO levels prioritizes how quiet the system should be over how quickly a set temperature is reached.

5 **Recirculate**

Enabling will recirculate the air inside the vehicle's cabin rather than drawing in fresh air from outside.

6 **Sync Temperature**

This synchronizes the driver and passenger temperatures.

7 **Max A/C**

Enabling Max A/C will set the fan speed at high and the air temperature at LO.

# Split Gate



The Split Gate consists of an upper liftgate and a lower tailgate that can be opened either together or separately.

**To use the Split Gate**

- Press Split Gate button on remote twice to open the split gate (this can be configured in the touchscreen – see the Split Gate section of your Owner's Manual for details).
- Press Split Gate button once to close the split gate.
- You can also press the liftgate button to the right of the camera to access the tailgate control button. Press to open the tailgate.

**While Inside the Vehicle**

Use the buttons on the instrument panel to the left of the steering wheel or tap the buttons on control screen.

- Press/tap to open the liftgate only.
- Press/tap to open the liftgate and tailgate together.
- Press to close both.

See the Split Gate section of your Owner's Manual for further details.

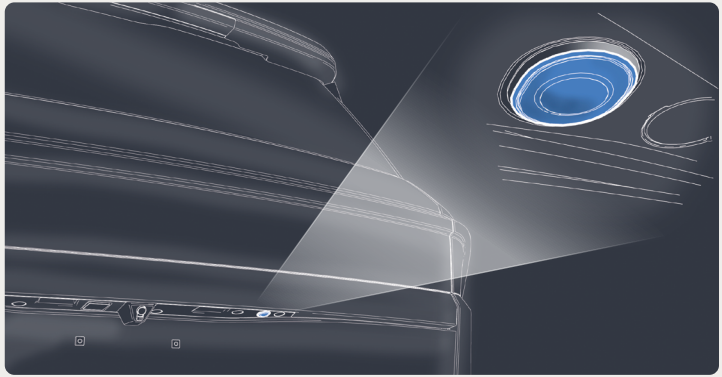

# Vehicle Set-up



Enjoy next-level personalization and enhance your driving experience by activating your vehicle's modem, connecting your account to the Lincoln app, and setting up a user profile to enable apps, voice assistant, and more.

## Prepare for Lincoln app and Modem Set Up

- Download the Lincoln app on a mobile device and create an account.
- You'll need your Google Account username and password to access key features and create a personalized Google experience.

## Activate Vehicle

Activate the vehicle's embedded modem and connect the vehicle to your Lincoln Account by scanning the QR code on the center screen with your phone camera, which will open the Lincoln app.

- Wait for the confirmation message, "Your vehicle has been connected."
- If QR code does not appear, tap on the Profile tile (P1) to begin your profile setup.

Note: If the QR code step above is not working, follow the steps in the Lincoln app to connect the vehicle to your account.

## In the Lincoln App

Follow the steps to add a vehicle and tap "Connect."

## In the vehicle

Start the vehicle and tap "Enable" when the pop-up message appears on the center screen. It may take a couple of minutes for the system to complete the process.

## Profile Set Up

The Lincoln digital experience allows you to create multiple profiles, each with personalized vehicle settings such as seats, mirrors, radio, navigation, and entertainment apps. Setting up a profile with your Google account will give you access to key features and unlock new levels of personalization and convenience.

If you do not sign in with your Google account, you won't be able to:

- Access to the Google Play Store to download apps.
- Get personalized Google Maps results including saving locations.
- Get personalized Google Assistant results such as calendar events.

**To get started:** Turn the vehicle on, remain in Park, and follow the on-screen profile setup steps. If the prompt does not appear, tap the "Profile" tile (P1) on the home screen to start the process.

Note: You must accept the Google Terms of Service to fully utilize all apps, Google Assistant, and Google Maps. Although Google Assistant and Google Maps function without a Google Account, only a Google Account will allow you to enjoy an all-encompassing and tailored experience. Google Assistant, Google Maps, and Google Play requires customers to connect with personal Wi-fi hotspot..

## Pair a Phone for Hands-Free Calling and Media

- Ensure mobile device is in Bluetooth pairing mode
- On vehicle Home screen, tap the "Add Phone" tile.
- On vehicle, tap the device you wish to pair.
- Confirm the PIN on the phone and vehicle match.
- Approve phonebook download to improve calling and texting.

You may now use Apple CarPlay® with your iPhone® or Android Auto® with your Android®, or return to the Lincoln Digital Experience.

Note: To allow Google Assistant access to your contacts, ensure that you share your contacts from your device with Google/Lincoln when you connect your device via Bluetooth.

Phones may be charged on the wireless charging pad or with a USB cord.

Apple CarPlay® will only connect wirelessly to your vehicle. Android Auto® may connect wirelessly or via USB.

## Lincoln App*

Explore the Lincoln app for the features and information you use most. Access your fuel levels, tire pressure, odometer and vehicle health alerts. Unlock the convenience of remote functionality capabilities such as lock/unlock and start/stop engine for equipped vehicles.

*Lincoln app is available in select markets, please contact the authorized Lincoln distributor

## Set Up Personal Wi-Fi Hotspot

Go to settings

Select Network & Internet

- Select Wi-Fi
- Wait for the system to search for available Wi-Fi hotspots
- Select your preferred Wi-Fi hotspots
- Enter the password

System will connect to the Wi-Fi hotspot

- Successful connection will show active Wi-Fi symbol on the center stack scree

## Google Play Store

The Lincoln Digital Experience offers the ability to download apps onto your vehicle through the Google Play Store. These apps are available for use in your vehicle by connecting a phone or portable Wifi device and include entertainment experiences, gaming, and more.

Play Store apps are downloaded onto individual driver profiles. Your driver profile must be signed into your Google Account to use the Google Play Store. Internet connectivity is required to download apps.

To access the Google Play Store and download apps:

Tap the app icon on the touchscreen.

Tap the Play Store icon.

- Search for and select the apps you want to download

As you use the Apps Drawer, you can customize the location of the apps by pressing and holding the icon and then dragging the apps into your preferred order.

Don't drive while distracted or while using handheld devices. Use voiceoperated systems when possible. Some features may be locked out while the vehicle is in gear. Not all features are compatible with all phones. Some Google Assistant, Google Maps, Google Play require mobile hotspot/Wi-Fi. Evolving technology/cellular networks/vehicle capability may limit functionality and prevent operation of connected features. Lincoln app, compatible with select smartphone platforms, is available via a download. Message and data rates may apply

# Voice Assistant

## Voice Assistant

Your Lincoln enables enhanced Voice Assistant commands that allow you to control navigation, listen to music apps, set reminders, check the weather, and more all with your voice.

Just say "Hey Google" to activate the voice assistant and control vehicle functions or compatible smart home devices.

**To get started:**

From the Settings menu (located in apps drawer) press Assistant & Voice then Digital Assistant.

Press and hold the Push-To-Talk button for a moment to activate your Bluetooth device's assistant.

## Google Voice Assistant

Google Assistant can handle a wide range of requests to help you drive without distraction.

**There are three ways to summon Google Assistant:**

- Say "Hey Google" or "OK Google."

Access the voice assistant button from the steering wheel menu.

Tap the Google Assistant icon on the center screen.

**Try the following prompts:**

"Play podcast."
"Take me home."
"Set temp to 22."
"Read text."
"Increase fan speed by one."

Apple CarPlay® is a trademark of Apple Inc., registered in the U.S. and other countries and regions. Google, Android Auto, and Google Maps are trademarks of Google LLC. Compatible Android® phone and compatible active data plan required.

Disclosure: Don't drive while distracted or while using handheld devices. Use voice-operated systems when possible. Some features may be locked out while the vehicle is in gear. Not all features are compatible with all phones. Some Google Assistant, Google Maps and Google Play require mobile hotspot / Wi-Fi. Evolving technology/cellular networks/vehicle capability may limit functionality and prevent operation of connected features. Lincoln app, compatible with select smartphone platforms, is available via a download. Message and data rates may apply.

# Software Updates

## Software Updates

Software updates are sent directly to the vehicle using a Wi-Fi connection which allows you to receive vehicle updates from anywhere within range of a Wi-Fi network. Connecting your vehicle to your home Wi-Fi is not required but may provide better coverage.

For a seamless experience, keep automatic updates ON, set a recurring schedule, and connect your vehicle to your personal Wi-Fi. Go to Settings then Software Updates from your vehicle touchscreen to manage update details.

## Switching Automatic Updates On and Off

Your vehicle may come with Automatic Updates switched ON. To make sure your vehicle always has the latest software, security and enhancements, we recommend keeping Automatic Updates ON. If Automatic Updates are turned OFF, approval is required to download or install a software update.

## Scheduling and Installing Software Updates

Some updates may require your vehicle to be switched OFF, so we recommend selecting a time you normally do not need your vehicle, such as overnight.

To install an update:

Tap the apps icon.

Select Software Updates.

To set a schedule:

Tap settings icon and tap 'Recurring Schedule' to set a schedule.

Note: During the installation, the vehicle may be temporarily unavailable. Most updates complete in less than 30 minutes, although some could take longer. Others happen during normal vehicle usage.

# Widget Display

Customize your Panoramic display with unique widget layouts per profile.

1 **Open Panoramic Configurator**

Tap Panoramic Configurator icon.

2 **Select Widget**

Tap on the desired widget in the touchscreen.

3 **Choose location of Widget**

While still holding the widget, drag it to the desired location in the touchscreen.

4 **Finished**

The desired widget shall appear in the selected location in your panoramic display.

# Audio Controls



1 **On/Off**

Press the Volume knob, or "Audio is off" on the home screen to turn the audio system on.

2 **Audio App Screen**

To access advanced audio settings, tap the Audio tile from the home screen.

3 **Switching Sources**

In the Audio tile, tap the Source menu to show all available audio sources such as AM, FM, DAB, Bluetooth, etc. and select.

4 **Changing Station/ Songs**

To change station/song, tap >> Forward or << Backward arrows or tap the Keypad icon to enter a station number.

5 **Settings Presets in AM/FM**

While listening to a station, tap and the selected station will appear on the bottom of the screen. Swipe along the preset bar to access any of the five preset stations. Press the star again to remove a station preset.

6 **Radio Settings**

Tap settings icon in the top right of the audio screen to access radio and sound settings.

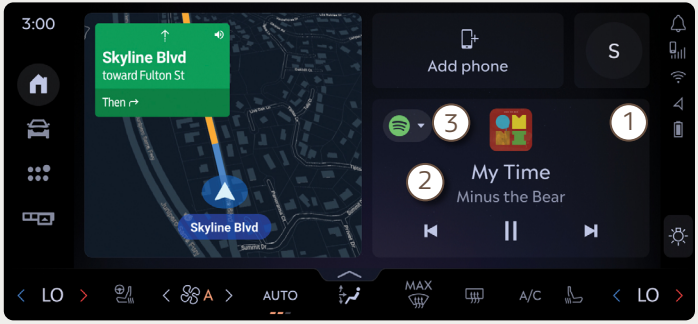

**U.S. model shown**

# Driver Assist



The vehicle is equipped with several Driver Assist features that help control speed, vehicle steering, and lane changes. Features activated by the left-hand steering wheel touchpad include:

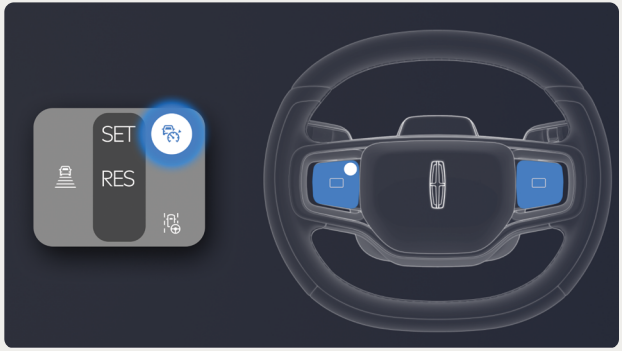


Cruise control and Adaptive Cruise Control features can be activated on the left touchpad of the steering wheel.

- Cruise control – Maintains a set speed.
- Adaptive Cruise Control – Adjusts your speed, maintains a set distance between you and the vehicle in front of you, and stops and resumes driving in stop-and-go traffic.

Lane-Keeping System and Lane Centering Assist features can be activated by the left touch pad of the steering wheel.

- Lane-Keeping System – Provides warnings of lane departure.
- Lane Centering Assist – Helps keep your vehicle centered in its lane.

# Drive Modes



Drive modes allow you to tailor your vehicle's driving system to various road conditions, for optimal performance and comfort. By selecting a mode, the vehicle automatically adjusts systems like engine, suspension, and steering for optimal driving dynamics.

To access drive modes, use the drive mode button located on the center console.  Use the touch screen to change your drive mode.

- Normal 2H: Balanced performance for everyday driving.
- Normal 4A: Automatically engages four-wheel drive auto, distributing power to all wheels as needed for driving on firm surfaces like pavement, or hard-packed dirt roads.
- Conserve: Optimizes systems for fuel efficiency and extended driving range.
- Excite: Increased throttle response and driving dynamics for sporty on-road driving.
- Slippery: Reduced throttle response and optimized shifting for better handling on slick surfaces.
- Deep Conditions: Improves control in low-speed off-road environments driveline changes to four-wheel drive high.
- Slow Climb (if equipped): Provides precise control for steep or uneven terrains, driveline changes to four-wheel drive low.
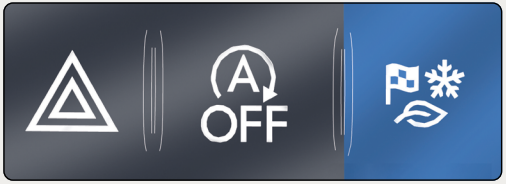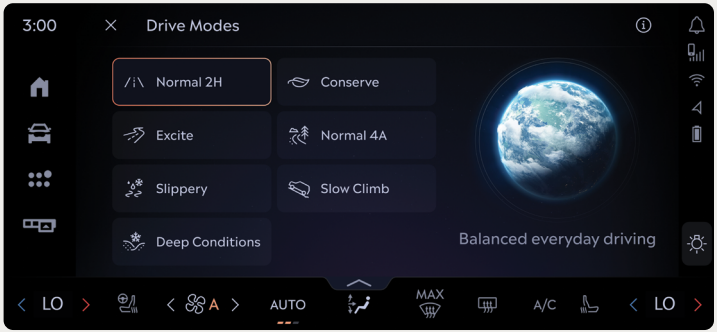
Note: When your vehicle detects a trailer it will automatically engage Tow/Haul mode if Auto Tow/Haul is active. See Owner's Manual for more details.